



Dear Collector


Thank you for your interest in our timepiece, ClockClock 24, and our studio Humans since 1982. This user manual will provide you with all the necessary information regarding the installation and the basic operation of your ClockClock 24. Carefully read the instructions before installing and operating the clock.

Please visit <https://www.humanssince1982.com/pages/support> if you need further assistance.


Humans since 1982

Package Contents

Clock 24,
Hanging template
*Two people are required
to hang the clock.*

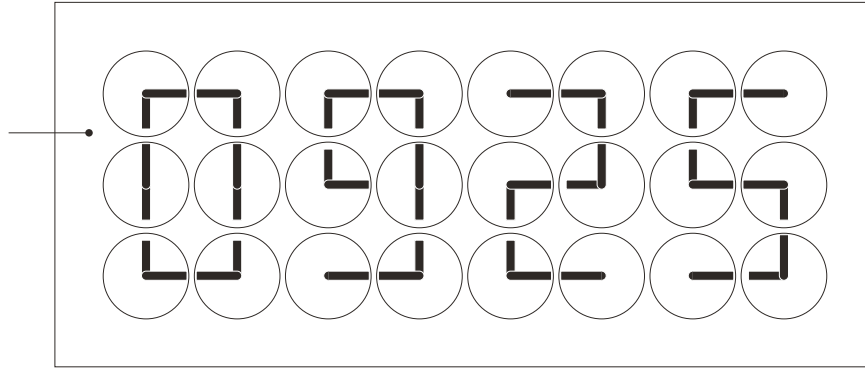

Wall hanging bracket

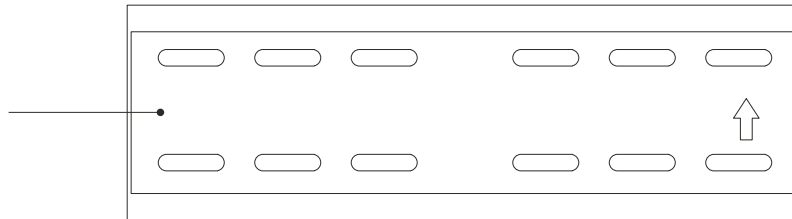

Package Contents

Certificate of Authenticity
and User Manual

Cotton gloves (2×)
*Always use cotton gloves
when handling the clock.*

USB Adapter
*Only use the provided
USB adapter to be
covered by the warranty.*


USB Cable
*Only use the provided
USB cable to be
covered by the warranty.*

Cleaning cloth

Washers (4×)

Screws (4×) and Plugs (4×)
*The screws and plugs provided
are for concrete or wooden walls
only. For other materials, please
use appropriate screws.*

Cable clip

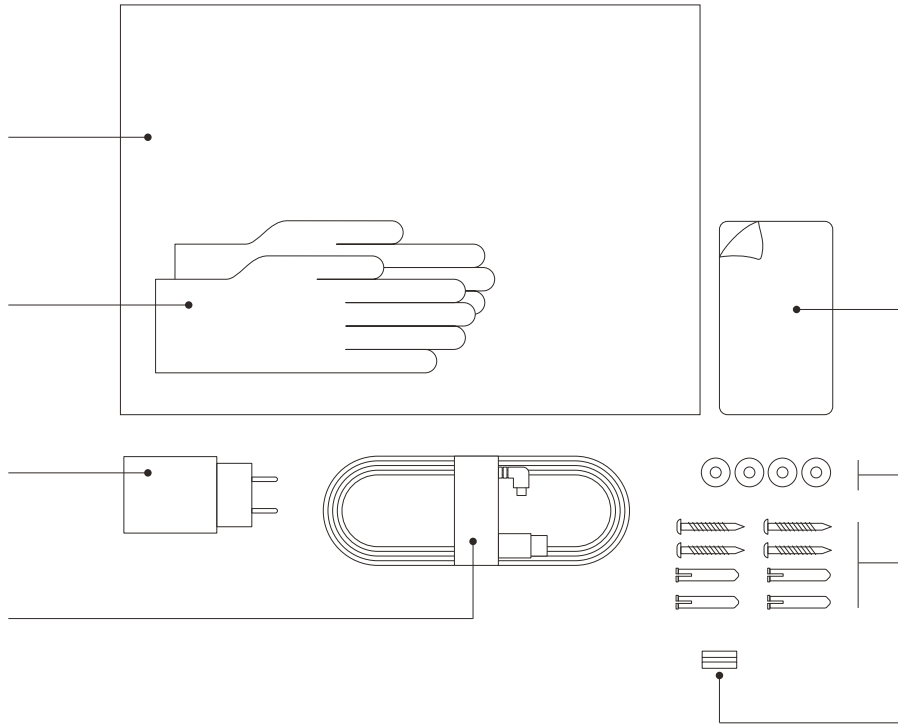

Step 1 – Installation

RECOMMENDED TOOLS


- Pencil
- Tape measure
- Drilling machine and drill bit
- Phillips screwdriver

NOTE Before hanging the clock on the wall, make sure the load-bearing capacity of the intended wall and wall anchors is sufficient for the 18kg (40 lbs) weight of the clock.

MOUNTING THE HANGING BRACKET


To determine the position of ClockClock 24 on the wall, please use the enclosed Hanging template as well as a spirit level as a positioning aid. Mark the position of the drill holes by using the hanging template.

NOTE Make sure there are no pipes or other supply lines near the marked drill holes.

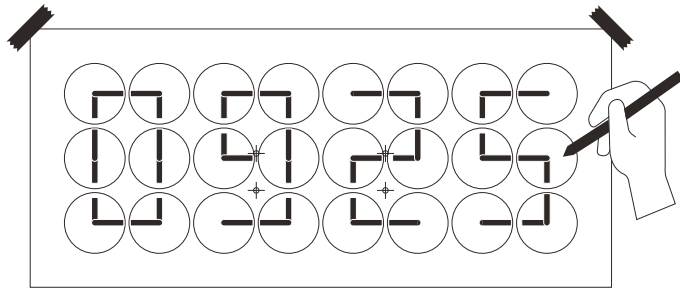


Drill the holes into the wall. Make sure the holes are sized to properly fit the wall plugs (ø8mm for the supplied plugs). Place the wall plugs in the drilled holes and mount the hanging bracket with the screws.

NOTE The screws and wall plugs provided are for concrete or wooden walls only. For other wall materials, please use appropriate screws and wall plugs.

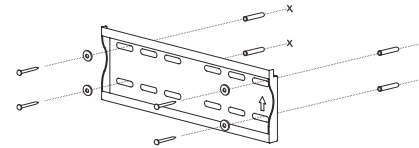


HANGING THE CLOCK

Before hanging the clock on the wall, place the clock front down on a protective surface. Carefully plug the Micro USB cable plug into the socket situated at the backside of the clock. You can use the black foam sheet of the packaging for this purpose.

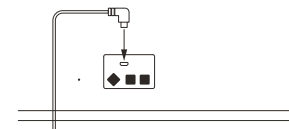

Hang the clock on the hanging plate. Make sure the brackets hook on both the top and the bottom of the bracket. Center the clock on the plate.


NOTE Two people are required to hang the clock.

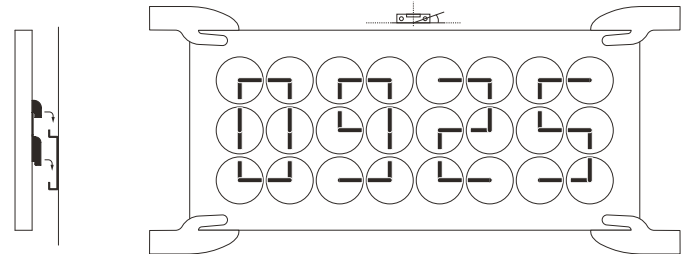


Step 2 — Starting ClockClock 24

Before starting the clock, move all clock hands manually pointing down to position 6:30 am/pm. Then, plug the USB adapter into the wall socket.

NOTE To prevent stains on the clock and the clock hands, always wear the provided cotton gloves when handling the clock.

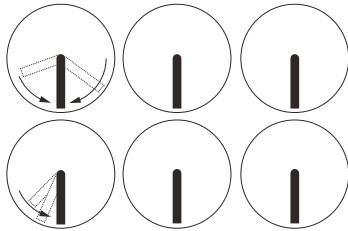

To start the clock, press any of the three buttons (hour, minute, mode) situated on the backside of the clock on the left-hand side. You will hear a beeping sound and the clock hands will start to move. The default time is set to 12:00 am/pm.

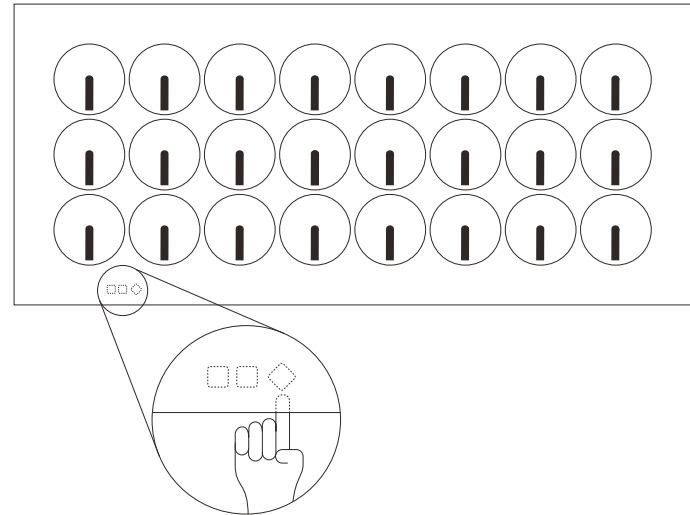

After starting the clock for the first time, the alignment of some clock hands might still need adjustment. In order to ensure that the clock hands are perfectly aligned with each other, you can fine-tune the alignment by manually adjusting the clock hands while the time is displayed.


To switch off the clock, press and hold any of the 3 buttons (hour, minute, mode) until you hear 3 beeps. All clock hands will immediately move to position 6:30 am/pm and will remain in this position until the clock is switched on again. The clock is now on standby and is using minimal electric power in order to recollect the time format and mode settings.

Step 3 – Setting the Mode

To see the currently selected mode, press the Mode button situated at the backside of the clock. The clock hands will align to display the current mode for 20 seconds.

As long as the mode is displayed on the clock, it is possible to change it to another mode. In order to change to the mode, successively press the Mode button until the desired mode is displayed.

You can consecutively press the Mode button until the desired mode is displayed.

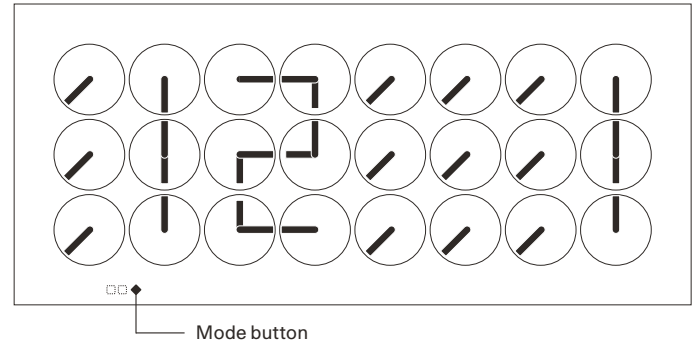

ClockClock 24 Modes

ClockClock 24 comes with 6 modes including two different time formats and three types of choreography arrangements: elaborate, medium and minimal.

MODE 1 – ELABORATE


The clock hands will move frequently to perform different choreographies and align to display the exact time.

MODE 2 – MEDIUM

The clock hands will move less frequently to perform a short choreography once every minute before aligning to display the exact time.

MODE 3 – MINIMAL

The necessary clock hands will only move once every minute to display the exact time. No choreographies are shown in this mode. Use this mode when manually fine-tuning the clock hands' alignment.

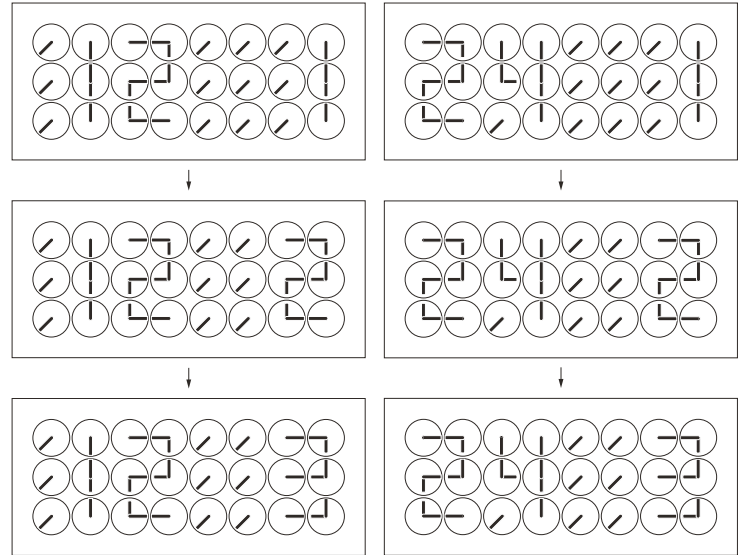

Mode 12:1 Elaborate
12 hour time format. 10 choreographies.

Mode 24:1 Elaborate
24 hour time format. 10 choreographies.

Mode 12:2 Medium
12 hour time format. 5 choreographies.

Mode 24:2 Medium
24 hour time format. 5 choreographies.

Mode 12:3 Minimal
12 hour time format.
Only displays the time,
no choreographies.

Mode 24:3 Minimal
24 hour time format.
Only displays the time,
no choreographies.

Step 4 – Setting the Time

Press the Hour or Minute button once to see the time currently displayed on the clock. The clock hands will immediately start to move when pressing the Hour or Minute buttons. As long as the time is displayed on the clock, it can be adjusted:

Press the Hour button once to increase the time by one hour.


You can consecutively press the button until the desired time is displayed.

Press the minute button once to increase the time by one minute.

You can consecutively press the button until the desired time is displayed.

Our expert advise:

ClockClock 24 does not display seconds. For everyday use, setting the time to the nearest minute is perfectly sufficient. For those who appreciate absolute precision, we offer a method to set the time exactly to the second. Simply scan the QR code at the end of this manual to access the instructions online.

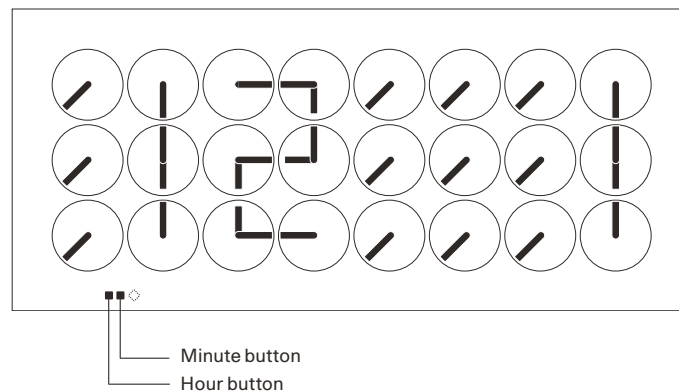

Maintenance

ADJUSTING THE CLOCK HANDS

To adjust the position of the clock hands, you need to align the clock hands manually. To do this, you can either switch the clock off and move all the clock hands down to position 6:30 am/pm, and then start the clock again. You can also select the third Mode (Minimal) and fine-tune the position of the clock hands by carefully aligning them with each other while the time is displayed.

ADJUSTING THE CLOCK LEVELING

If the clock is not perfectly leveled you can adjust the hanging bracket. Identify the side of the clock that appears to be lower. Remove the clock from the wall and place the clock front down on a protective surface. Turn the screw situated on the hanging bracket on the side you want to lift clockwise. Hang the clock and verify the levelling. You can repeat the process until the piece is perfectly horizontal.

ADJUSTING THE USB CABLE

You can use the provided cable clip to fix the power cable to the wall. Insert the power cable into the cable clip and remove the adhesive from the back of the cable clip. Place the clip on the wall and fix the cable in a straight line.

CLEANING THE CLOCK

ClockClock 24 is made of a mineral composite that shares the same qualities as stone. It is therefore sensitive to impacts. Always use the cotton gloves when cleaning the clock. Unplug the power adapter from the wall socket to switch off the clock.

Once the clock is switched off, you can safely clean its surface. To remove dust, use the provided cleaning cloth. In case of persistent stains such as fingerprints, use isopropyl alcohol to clean the clock. Wipe the surface of the clock completely dry immediately after cleaning it to prevent residual stains.

NOTE *Do not spray any liquids directly onto the clock.*

NOTE *Avoid cleaning liquids such as window cleaners as they leave a wax build-up that dulls the surface of the clock.*

BACKUP BATTERY

The clock is equipped with a small backup battery to ensure the clock will remember the time and the selected mode during a short power loss.

MOVING THE CLOCK

Once the clock is switched off, remove it from the hanging fixture, unplug the cable and place the clock on a soft, protective surface. Follow the packing instructions carefully to ensure the clock is protected during transport.

Repairs and Warranty

WARRANTY

ClockClock 24 is covered by warranty for 4 years starting from the date of purchase, meaning that Humans since 1982 undertakes to provide remote support assistance and free mechanical or electrical spare parts for 4 years. You can read our full Warranty, Complaints and Repairs Terms here:

<https://www.humanssince1982.com/pages/terms-of-service>

To be covered under warranty we require you to only use materials and accessories provided by Humans since 1982 when operating the clock. This includes using the original product packaging if the clock is to be transported. Please follow the packaging instructions carefully.

In the case of damage caused due to instructions in this manual not being followed, the warranty will be voided. Warranty is also voided if the clock is tampered with (e.g. altered, opened or modified). In case of transportation, it is required to keep the original ClockClock 24 packaging to be covered by the warranty.

For ClockClock 24 with plated clock hands:

Plated clock hands may experience subtle colour variations over time when exposed to environmental influences such as humidity. As this is a natural characteristic of plating, the clock hands are not covered under the warranty.

REPAIRS AND REPLACEMENT

If you lose the power adapter or another accessory included in the ClockClock 24 shipment, please contact us at support@humanssince1982.com to purchase a backup. Only use the provided USB power adapter. Any use of unapproved devices will void the warranty.

If the clock is damaged or not functioning properly, please contact us at: support@humanssince1982.com. In your message, please include a description and images or a video of the error. Any maintenance or repair work should only be carried out by Humans since 1982 or an expert authorized by Humans since 1982. Do not attempt to repair or open the clock yourself. Note that we still offer charged repairs on damaged or malfunctioning clocks that are out of warranty.

ClockClock 24 – Packing instructions

If the ClockClock 24 art piece is to be transported, please pack it in the original product packaging according to the following packaging instructions. Warranty will be voided if the art piece is transported without the original product packaging.

Contact us at support@humanssince1982.com for questions or to purchase the original product packaging.

STEP 1 – PREPARE PACKAGING

Open the original product packaging and make sure the inside and the foam are clean and free of dust and debris.

STEP 2 – REMOVE AND UNPLUG CABLE

Wear the art handling gloves that come with the art piece. Lift the art piece from the brackets and remove it from the wall. Unplug the power cable from the backside.

STEP 3 – PLACE CLOCK IN PRODUCT PACKAGING

Place the art piece inside the product packaging. Make sure the foam properly protects the surface and corners of the art piece. Place the top foam on the surface of the art piece.

STEP 4 – INCLUDE ACCESSORIES


Include all accessories provided in the accessory box. Place the accessory box inside the cutout of the top foam. The provided accessories are: power cord, power supply, art handling gloves, wall plate, user manual, cleaning cloth, wall screws.

STEP 5 – INCLUDE HANGING TEMPLATE

Place the hanging template on top of the foam and close the product packaging. Do not place the template in direct contact with the surface of the art piece.

STEP 6 – PLACE PRODUCT IN SHIPPING PACKAGING

Prepare the shipping packaging. Place two corner foam pieces at the bottom corners of the shipping packaging. Place the product packaging inside the shipping packaging and add the remaining two corner foam pieces. Close and secure the shipping packaging.

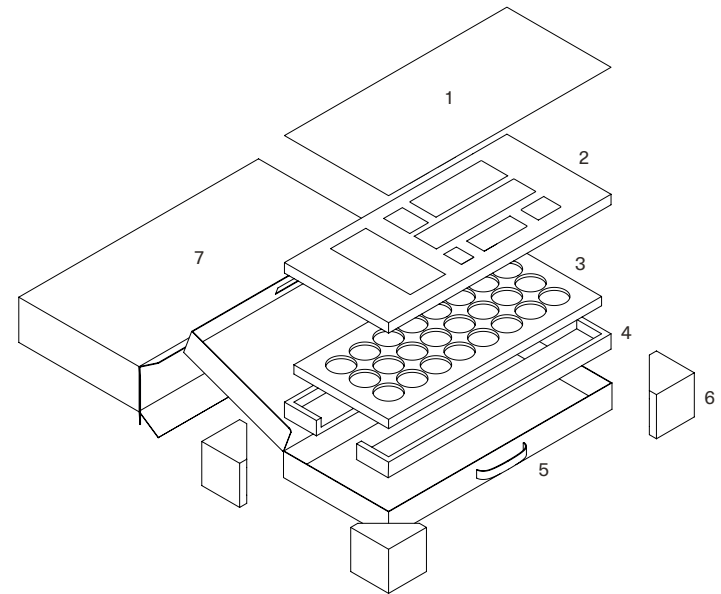

1. Hanging template
2. Accessories layer
3. ClockClock 24
4. Protective foam

5. Product packaging
6. 4×Corner foam
7. Shipping packaging

Safety Instructions

GENERAL

- Make sure to read this manual carefully before installing and operating ClockClock 24.
- The clock should never be operated by a person not capable of fully understanding the manual (including children) unless they are supervised by a person responsible for their safety.
- Children can choke on small parts of the clock. Tampering with the clock hands or heavy vibrations can shake the clock hands loose. Young children should be properly supervised.

PLACEMENT

- ClockClock 24 can only be mounted and operated in dry indoor spaces. Do not install the clock in places with high levels of humidity.
- The clock should never be exposed to direct sunlight, very high/low temperatures, moisture or strong vibrations. The clock should only be operated in temperatures between 10°C and 35°C (50°F to 95°F).
- The clock is sensitive to shocks. Please place it where no heavy movements can occur.

WALL MOUNTING

- ClockClock 24 is not meant to operate in any other way than correctly mounted on a solid wall as it could cause physical damage or bodily harm.
- Make sure the wall you are mounting your clock on and the chosen screws and plugs are suitable for your wall and can safely support the weight of the clock. The total weight is 18 kg (40 lbs).
- Make sure no cavities, pipes or other supply lines are located on the section of the wall where you will mount the clock.
- The clock should be installed by someone with basic building experience who fully understands this manual.

CONNECTING TO ELECTRICAL POWER

- Never touch the power socket or any other electrical equipment, including the clock itself, with wet hands due to the risk of an electrical shock.
- Please beware of the electrical specifications of the clock, the USB cable and the USB power adapter to avoid the risk of short-circuits, fire or electrical shock.

The clock can only be connected to and operated from a household approved electrical outlet. Any other use of the clock is strictly prohibited and will void the warranty.

- Only use the USB cable and USB power adapter provided to be covered by the warranty.
- Make sure to plug the connector of the power adapter into the clock carefully to prevent any damage to the plug or power inlet.

INTELLECTUAL PROPERTY

- The ClockClock 24 design is protected by intellectual property rights.

DISCLAIMER

- Humans since 1982 AB is not liable for any damage to property or personal injury caused by not following the instructions for usage, improper handling or incorrect placement and mounting of the clock.

CE MARKING

- CE marking on this product represents the product in compliance with all directives that are applicable to it.




WEEE COMPLIANCE STATEMENT

- European Directive 2012/19/EU requires that equipment bearing the WEEE symbol on the product and/or its packaging must not be disposed of with unsorted municipal waste. It indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities. For more detailed information about the disposal of your old equipment, contact your local authorities, waste disposal service, or the shop where you purchased the product.

DECLARATION OF CONFORMITY

- Hereby, Humans since 1982 AB declares that this ClockClock 24 device, is in compliance with the essential requirements and other relevant provisions of the following EU-Directives: 2014/35/EC, 2014/30/EU, 2011/65/EU, 2009/125/EC

Specifications

| | | |
|----------------------------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clock | Clock 24: | 900 × 400 × 34 mm (35,4" × 15,7" × 1,3") |
| Weight of clock incl. brackets: | | 20 kg (44 lbs) |
| Distance between clock and wall: | | 23 mm (0,9") |
| USB adapter input: | | 100V- 240V 50-60 Hz 0.25 A |
| USB adapter output: | | 5V 3A DC |
| Micro USB cable: | | 24 AWG / 2C, 300 mm (11,8") |
| Certified: | |    |

Scan for Advanced Settings:



